



 
INSTRUCTIONS: POPIM1

Impulse Counter Display

Pens, Keychains, Crystal Ornaments, and Wooden Ornaments

Includes:


- A. Backer Board (1)
- B. Easel (1)
- C. Hooks (11)

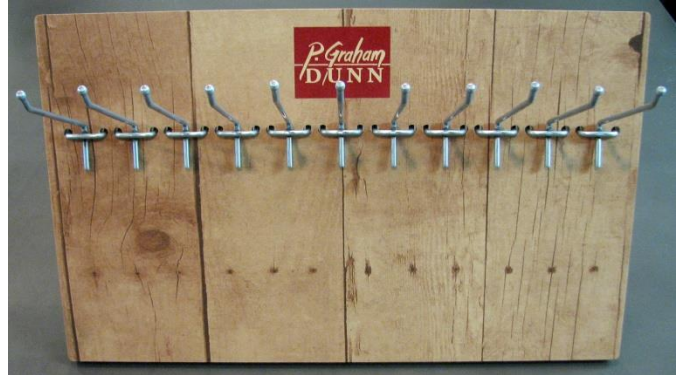

16.5"W x 9.25"H x 6"D



Backer Board

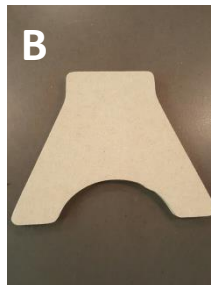


Easel




Hooks

1. Remove Easel (B) from the back of the Backer Board (A).

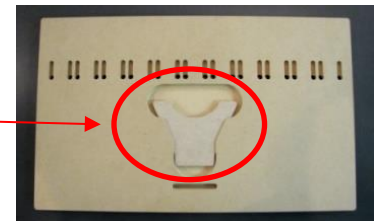

2. Place Easel (B) into designated slot on back of Backer Board (A).

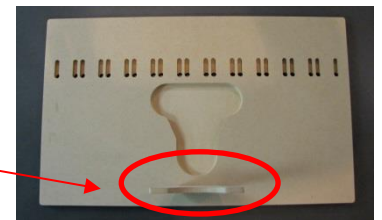

3. Stand display upright on counter.



Filling in Product:

1. To display Pens, place 11 Hooks (C) on Backer Board (A).



2. To display Key Chains, place 6 Hooks (C) on Backer Board (A).



3. To display Crystal Ornaments, place 6 Hooks (C) on Backer Board (A).



4. To display Wooden Ornaments, place 6 Hooks (C) on Backer Board (A).



NOTE: For Key Chains and Ornaments, start on the far left and leave 2 holes between each hook placement.

